

POWER WEEDER
Owner's Manual

RANGA



GEAR TRANSMISSION TYPE

OPERATION SAFETY

Precautions to be taken while operating the power weeder

- The tines are rotating and is very dangerous to accidentally put some body part while working it will cause serious injury.
- When machine is working , pay attention to the safety!
- The gear lever should be in neutral when starting the machine
- The instruction manual should be read before operation of the power weeder
- The clutch must be fully pressed when shifting gears.
- Must install the safety protecting board on the machine before using machine or after maintenance.

CHECK BEFORE OPERATION

- **Engine oil:** check and fill oil grade 10W30 into the crankcase (**0.6 liters**)
- **Gear box oil:** check and fill oil grade 90 EP into the gearbox (**2.4 liters**)
- Top up oil in the air filter with grade 90 EP to the correct level indicated in air filter
- Check air pressure in tires to 1.40 Kg/*cm*² **20 psi**

Content

Chapter One a Survey on Power weeder	5
I. Main Technical Parameter.....	5
II. General View.....	6
Chapter Two Main Applications of Power weeder	7
I. Cultivating.....	7
II. Ditching & Ridging.....	8
III. Short Distance Transport.....	8
IV. Multi-functional Working.....	8
Chapter Three operation & use method of Power weeder	9
I. Assembly after Unpacking.....	9
II. Installation and Adjustment for Cable.....	10
III. Check and Refueling.....	11
IV. Starting.....	13
V. Operation.....	13
VI. Connection Use of Auxiliary Devices & Tools.....	15
VII. Training.....	16
VIII. Preparation.....	16
IX. Operation.....	17
X. Matters Need Attention during the Use of Power weeder.....	17
XI. Safety Considerations.....	18
Chapter Four Maintenance & Service Method of Power weeder	20
I. Breaking- in.....	20
II. Maintenance and storage.....	20
III. Technical Service of Power weeder.....	20
IV. Technical Service List of Power weeder.....	22
V. Long-Term Storage of Power weeder.....	22
Chapter Five Debugging Method of Power weeder	23
I. Debugging Method of Mesh of Bevel Gear.....	23
II. Debugging Method of Reverse Gear and Cable.....	23
III. Debugging Method of Clutch Cables.....	24
IV. Debugging Method of Accelerator Cables.....	24
V. Use & Debugging Method of Handle bar.....	24
Chapter Six Troubleshooting of power weeder	26
I. Troubleshooting of Diesel Engine.....	26
II. Troubleshooting of Clutch.....	26
III. Troubleshooting of Gear-Box.....	27
IV. Troubleshooting of Transmission system.....	29
V. Other Trouble Shootings.....	29
VI. Torque and Bearing list.....	30

Chapter One a Survey on Power weeder

I. Main Technical Parameter

Item				
Engine	Model		07	
	Max Power(KW)		4KW 6.5 hp at 3600rpm	
	Rated speed	Rate rotating speed		3600
		Rotate speed of power output		3600
	Displacement(CC)		209	
	Ignition mode		Compression ignition	
	Start mode		Recoil start	
	Fuel tank Capacity(L)		3.6	
	Engine oil Capacity(L)		0.6	
Power weeder	Machine Dimension(L*W*H)(mm)		1010x570x880	
	Machines weight(kg)		≤105	
	Transmission mode		Full gear transmission	
	Connection mode		Direct connection	
	Speed	Running speed(Km/h)	Fast	10
			Slow	5
		Working speed(Km/h)	Cultivating	0.5-1.3
			Reversing Speed	
	Blades	Rotate speed(r/min)		115
		Max. radius of gyration(mm)		180
		Total blades quantity(pcs)		24
		Total group of blades(pcs)		6
		Blades for each group(pcs)		4
		Diameter of the farming blades		36 cm
	Rotary blade type		Bent blade for dry land	
	Clutch mode		Wet multiple disc clutch land manual control	
	Tilling Depth(mm)		≥100	
Tilling Width(mm)		≥800		
Working efficiency(ha/h)		0.043-0.089		
Fuel Consumption(g/kWh)		313g/kWh		
Gear-box's oil capacity(L)		2.4 L		
Sound power level		dB(A) ≤88		

Table.1

II. General View

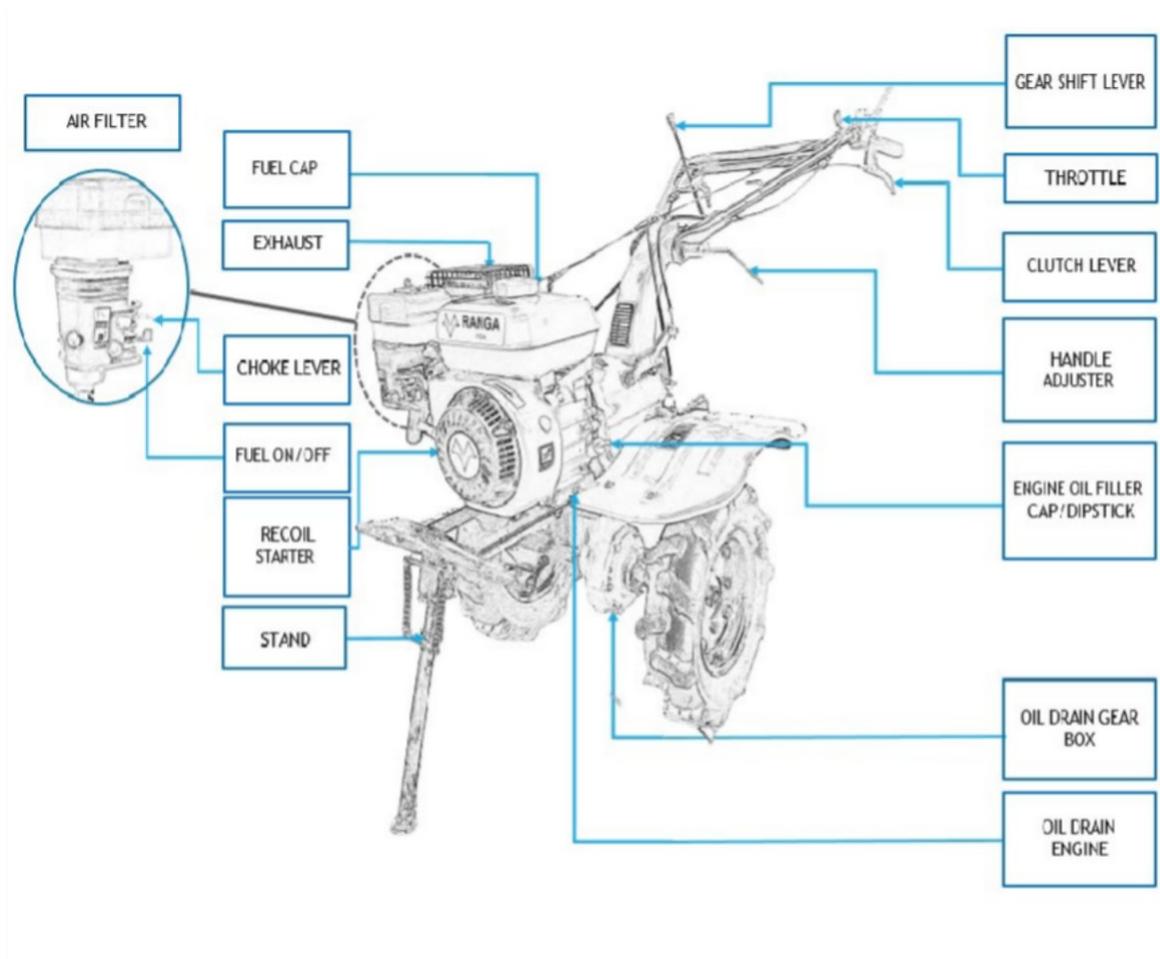


Figure 1.

Chapter Two Main Applications of Power weeder

I. Cultivating

Fix the cultivating device onto the left and right side of the transmission shaft of the running part of the power weeder, then use two M8x55 screw bolts for axial positioning. After that, the machine can start cultivating finally. (See the following table 2 and 2, 3)

devices	3 blades	4 blades
No. of rotary blades	3x8	4x8
Width of cultivating(mm)	1050	1050
Applicable earth	Paddy field without enough water and with earth of high viscosity	Hard earth

Table.2



Figure 2. Cultivating device



Figure 3. Ditching device

II. Ditching & Ridging

Knock down the adjustment screw before the ditcher is fixed. Subject to the adjustment of the width and height for ditcher, then the ditching can be conducted. (see figure 3)

III. Short Distance Transport

when fixing the forearm of the wagon box on the trailer and wheels on the transmission shaft of the running part, the machine can do a transportation . The rated load is 250kg, under normal rotated speed of the diesel engine, speed of the fast shift is about 10km/h and that of the slow shift is about 5 km/h.

IV. Multi-Functional Working

Dismount protection cover of the gear-box (No.2 in Figure 1), unscrew the bolts away from the rear part of the main shaft, take the cover for keys out of shaft, fasten the self-contained belt pulley or coupling onto the gear-box's main shaft's rear part with screws. Type A of common V belt is adopted for belt pulley's cross section. Rated rpm of the belt pulley is 3000 rpm. When the corresponding devices are equipped, pumping water, spraying, threshing, reaping, generating electricity, etc are realized. (Above additional implements are in exploration process. Please contact with the local distributor if you need above implements.)

Chapter Three Operation & Use Method of Power weeder

I. Assembly after Unpacking (see Figure 4)

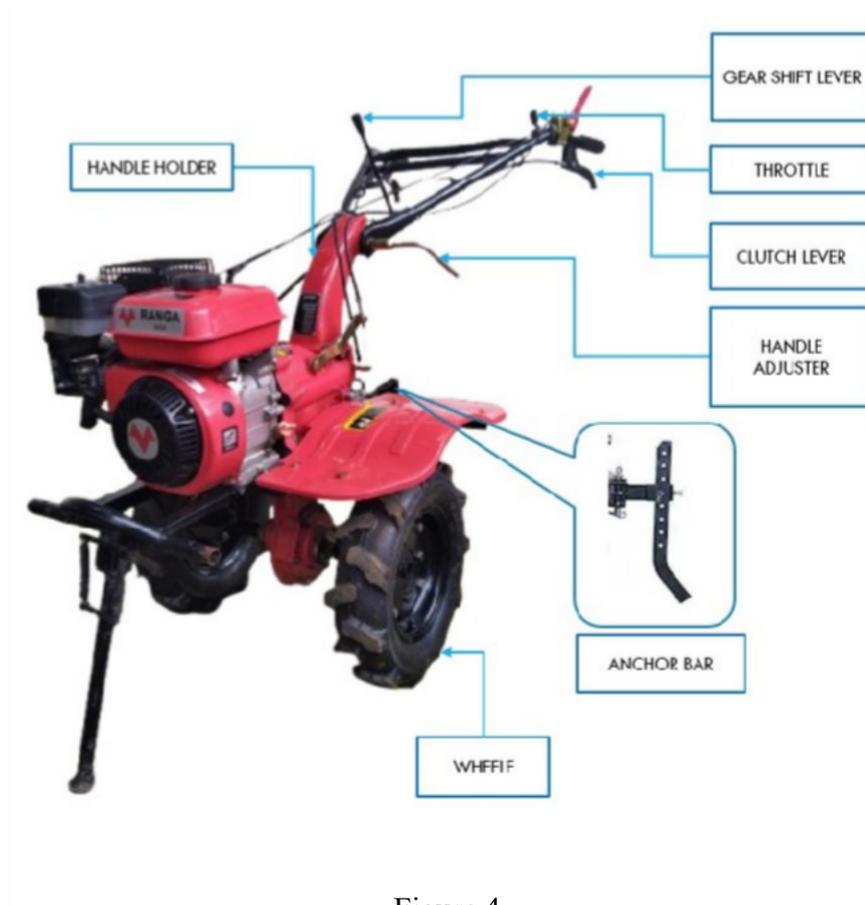


Figure 4.

1. Fix the main machine, insert the hexagonal output shaft into stepped box's output casing's hexagonal hole.
2. Fix the hexagonal stop casing onto the hexagonal output shaft with M6x6 socket head screws, and make the hexagonal shaft not move axially.
3. Wheel fixing: fix the wheels at the two sides of the Hexagonal output shaft, and fix them with two M8X55 bolts and M8 nuts.
4. Trailer fixing: Fix the link group onto the trailer, use the link shaft assembly for connection, insert the split pin n3x26 and insert the velocity adjustment screw into square groove of the link group, and fix it with M8X55 bolts and nuts.
5. Handle bar fixing: Two gear discs of the handle bar support aim at the discs of the handle bar support base, and adjust the positions. Fix them with M16X140 bolts, flat gasket 16 and spring gasket16.
6. Shifting bar assembly: Get the shifting bar through the groove of shift support in the handle bar support base, and insert it into the hole of the shift casing, then fix it with split pin. n3.2x16. set the shifting bar in neutral position.

7. Assembly drawing of safety protection guard install.

ATTENTION: After maintenance the safety protection guard installment must fix it on the power weeder wholly

II. Installation and Adjustment for cable

1. Adjustment of the clutch cable. (See Figure 5 and 6)

- a) Unscrew the locknut of the tie rod
- b) Spin the tie rod clockwise until the exposed handle support is the shortest.
- c) Get the joint of cable into the clutch wire socket of rear part of the gear-box assembly, and ensure the joint of cable goes into the hole of the sock
- d) Get the wire into the M8 hole on base of the clutch fork arm, properly press the fork arm of the clutch, and put the joint of cable into the wire socket.
- e) Unscrew the tie rod, grasp and loosen the clutch handle until the spring force in the clutch can reset the handle, then screw the locknut.

Figure 5.


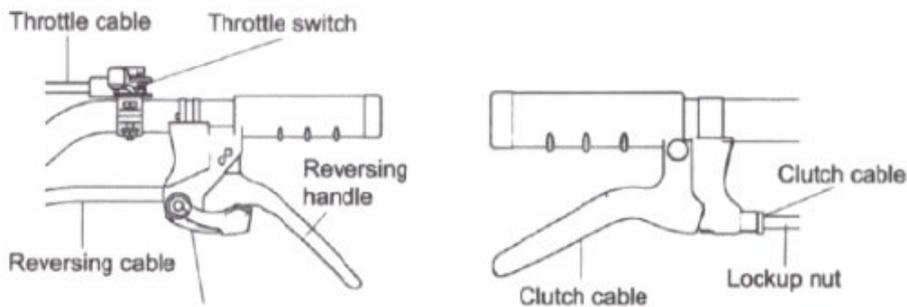


Figure 6.

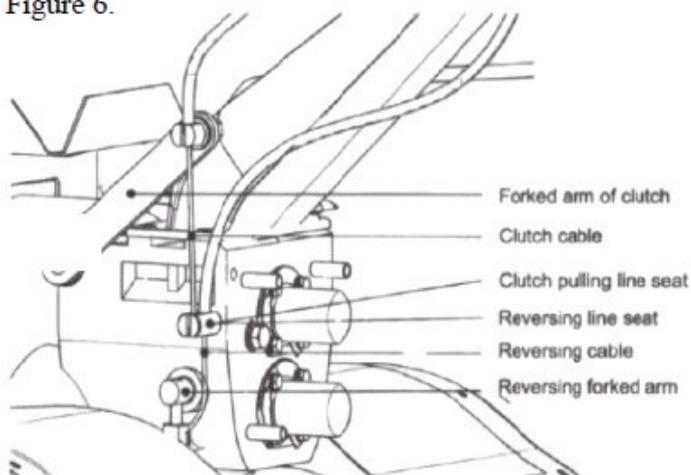

2. Adjustment of the reversing gear cable (See Figure 5 and 6)

- a) Unscrew the locknut of the tie rod.
- b) Spin the tie rod clockwise until the bare handle support is the shortest.
- c) Get the cable into the reversing fork shaft besides the gear-box, and ensure the joint of cable
- d) Properly pull the reversing fork shaft counterclockwise, get the cable into the narrow gap of Binding bolts of end of driving shaft of gear-box 10-12 the reversing wire socket besides the gear-box, and ensure the pipe head goes into the hole of the wire socket
- e) Unscrew the tie rod, group and loosen the clutch handle until the spring force in the clutch can reset the handle, then screw the locknut.

3. Adjustment of the throttle cable (See Figure 7)

- a) Shift the throttle switch clockwise to minimum positioning.
- b) Get wire of the throttle cable into the threading base and firm base on top of the throttle adjustment board of the petrol engine.
- c) Tighten the wire, screw the binding bolts on the firm base.
- d) Adjust the throttle switch repeatedly until the throttle handle on the oil valve adjustment board can reach the maximum and minimum position.

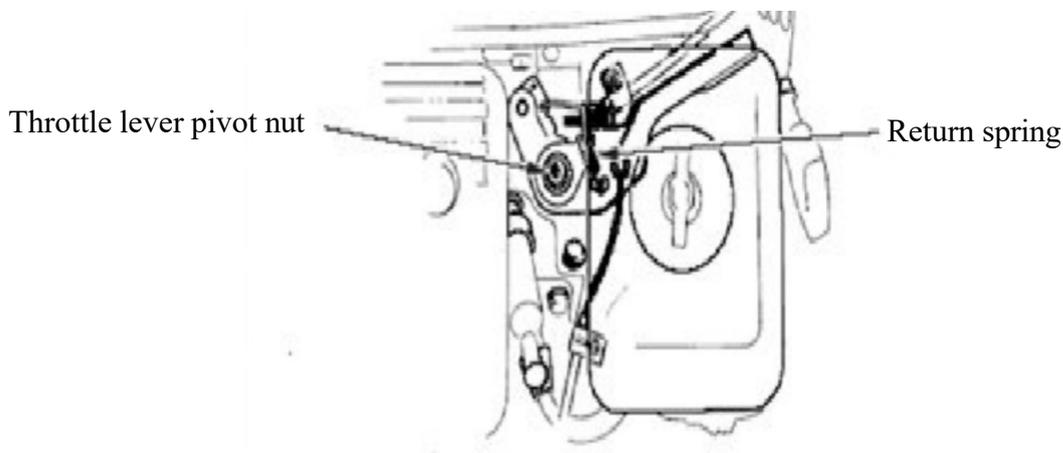


Figure 7.

III. Check and Refueling

1. Check whether all the connection bolts are loose or not, and fix the connection bolts according to the moment of force listed in table 3.

Name of parts	Moment of force (N.M)
Flange and engine	20-25
Flange and gear-box	35-40
Binding bolts of end of driving shaft of gear-box	10-12
Binding bolts of reversing gear shift of gear-box	26-40
Binding bolts between engine support and traveling mechanism	35-40
Binding bolts of cover of traveling mechanism	10.6-15
Connection bolt between travelling mechanism and gear-box	35-40
Set bolts of petrol engine base	35-40
Set bolts of handle support base	35-40

Table.3

2. Check each handle of the manipulation system (throttle switch, clutch, shifting bar and reversing bar) to see whether they can move freely or not. If they are out of the right positions, make them at the right positions.

3. Pull shift bar of the gear-box to the neutral position.

4. Refilling the engine oil Figure 8

- a) Refill the SAE10W-30 lubricant into the crankcase of the diesel engine. See Figure 9
- b) Make the whole machine stable and horizontal, and refilling 90EP lubricant engine oil into the gear-box from oil hole at the top of the gear-box .when check the oil level, put the oil dipstick into the oil .(Note: not to turn the dipstick around), the oil level should be between the two limits of the Lower limit oil dipstick. (Refer to figure 8

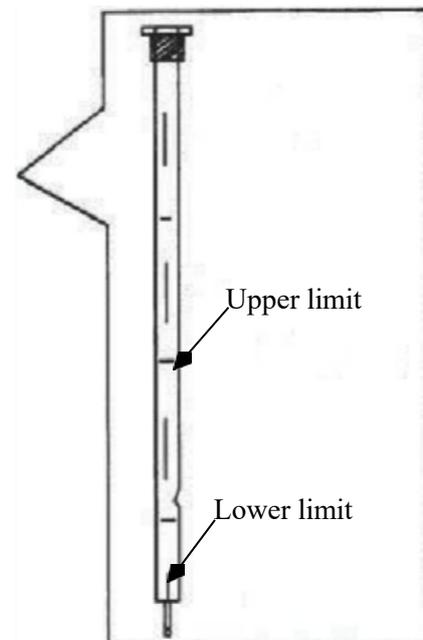


Figure. 8

- a) Knock down the lower cover of the air cleaner,
- b) refill about 0.1 liter 20# engine oil into the air cleaner.
- c) Select the appropriate lubricant for the Petrol engine according to the environmental temperature. (See figure 9)

4. Refill Regular gasoline Petrol into the petrol engine. (See the instruction manual of the petrol engine for details)

Note: do not exceed the mark when refilling.

5. Make pre-starting preparations according to the instruction manual.

IV. Starting

(Note: the shift bar must be on the neutral position)

1. Start the petrol engine according to the procedures stipulated in the instruction manual for the petrol engine.
2. The petrol engine should run at a low speed (1500-2000 rpm) under no load for 2-3 minutes.
3. Check whether the petrol engine runs normally or not. If it is abnormal, stop the engine and have a check.

V. Operation (Note: breaking-in must be performed before the use of power weeder, see the breaking-in method in chapter Four)

1. Using a slow shift

Entrance of lubricant:

Fill in machine oil from oil month when petrol engine is placed level, and checking the oil level only needs a poke by dipstick rather than a rotation dipstick

Classification of maintenance for

P.I. petrol engine
Lubricant shall be grade CC or CD

- a) The left hand grasps the clutch handle tightly and makes the clutch separated.
- b) The right hand pulls the shift bar backwards, make sure the shift casing locates in the slow shift position, and observe whether it reaches the right position or not. Then the right hand grasps the right handle. (Note: do not grasp the reversing bar)
- c) Loosen the clutch handle gradually, the clutch will combine, and the power weeder can run at a slow speed.

d) The right hand increase the throttle properly, the motor can run at a speed of 5 km/h

2. Using a fast shift

- a) The left hand grasps the clutch handle tightly and makes the clutch separated.
- b) The right hand pushes the shift bar forwards, make sure the shift casing locates in the fast shift
- c) Position, and observe whether it reaches the right position or not. Then the right hand grasps the right handle. (Note: do not grasp the reversing bar)
- d) Loosen the clutch handle gradually, the clutch will combine, and the power weeder can run at a fast speed.
- e) The right hand increase the throttle properly, the motor can run at a speed of 10 km/h.

3. Using a receiving shift

- a) The left hand pulls grasps the clutch handle tightly and makes the clutch separated.
- b) The right hand pulls or pushes the shift bar to the neutral shift and observe whether it reaches the right position or not. The forefinger of right hand grasps the trigger of the reversing shift first, then the right hand grasp the reversing handle.
- c) Loosen the clutch handle gradually, the clutch will combine, and the power weeder can run backwards. (Note: do not loosen the reversing handle)
- d) When the backward running of the machine is not needed, the left hand holds the clutch handle gradually, and the right hand loosens the reversing handle.

4. Shift when the machine is running, reduce the oil valve of the diesel engine (but subject to the diesel engine's not quenching), then makes the clutch separated. When the machine stops running, then shift.

5. Change directions: pull the handle to left or right to make the machine turn left or right. (Note: pulling the wrong handle may lead to damage to the gears)

6. The operation method of recoil/electric starter and safety device

- a) Left hand close upon the red emergency stop handle with the handle bar; draw back the clutch handle with your middle finger and ring finger at the same time. The above two locks mutual locking cause the engine at the condition which may start. And now, the operator can recoil —start the engine by hand according to the indication of instruction manual.
- b) If the engine is electric-starting model, carry out following two steps. (step2, 3 are not suitable for recoil start engine) connecting well the power supply and control switch as the electric start
- c) Hookup (or connect it beforehand). If the power weeder without power supply, you should prepare a lead-acid battery accord with direct current 12V, 36AH.
- d) Clockwise turn the starting-key to the start position after inspects unmistakably, and then release the key after the engine started, it will return to the primary position automatically.
- e) Adjust the throttling cock to the right position after the engine started.
- f) Fasten upon the handle bar(Grasp the emergency stop handle and the handle bar with your left hand), and buckle the trigger of emergency stop lock come out from the clutch handle

gently by your middle finger, the clutch handle restoration adown, then the clutch switch on, and the machine start to work. You should grasp the emergency stop handle and handle bar all the while in whole working course.

- g) Meet emergency, release the emergency stop handle and handle bar, the engine will flameout and the machine will stop working immediately.

7. Stop the machine

- a) Grasp the clutch handle, and make the clutch separated.
- b) Pull the shift bar to the neutral position, loosen the clutch handle, switch the oil switch clockwise to the minimum position, the machine will stop.
- c) When stopping the diesel engine is needed, the stopping should be conducted according to relative contents in the instruction manual. (Note: stopping the machine is generally conducted on the flat ground)

VI. Connection use of Auxiliary Devices & Tools

1. When cultivating is needed, knock down the wheels, fix the hexagonal union of the cultivating device onto two ends of the hexagonal shaft of the running part, and axially fix them with M8x55 bolt. Note: cultivating blades are divided into two groups, namely, the left and the right. Fixing the blades should guarantee that when the machine is running, the blade edge should work first. After fixing the blades, also fix the left and right protection board for safety purpose. Depth of the cultivating can be realized by adjusting height of the velocity adjustment screw and angles between the lever and the ground.

2. Cultivating for paddy field: when the submerged depth of human's feet in the paddy field is less than 25cm, bent blades for wet land can be directly used for the cultivating of paddy field.



3. When ditching is needed, unlade the Deep Furrowing Resistance Stick, fix the ditcher, adjust width & height of the ditcher, then ditching can be conducted.(See Figure 3)

Width scope of ditching: 14cm-40cm

Depth scope of ditching: 11cm-25cm

4. Short distance transport

Fix forearm of the wagon box on the trailer and wheels on the transmission shaft of the running part, the

machine can do a transportation job. The rated load is 250kg, under normal rotated speed of the diesel engine, speed of the fast shift is about 10 km/h and that of the slow shift is about 5km/h.

5. Multi-functional working

Knock down protection over of the gear-box (No.2 in Figure 1), unscrew the bolts away from the rear part of the main shaft, and take the cover for keys out of the shaft, fasten the self-contained belt pulley or coupling onto the gear-box's main shaft's rear part with screws. Type A of common V belt is adopted for belt pulley's cross section. Rated rpm of the belt pulley is 3000 rpm. When the corresponding devices are equipped, pumping water, spraying, threshing, reaping, generating electricity, etc are realized.

VII. Training |

1. Read the instructions carefully. Be familiar with the controls and the proper use of the equipment.
2. Never allow children or people unfamiliar with these instructions to use the machine. Local regulations can restrict the age of the operator.
3. Never work while people, especially children, or pets are nearby.
4. Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.

VIII. Preparation

1. The safety protection guard must be attached to the machine before using.
2. Check that the blade and fender are correctly as send and securely fastened.
3. While working, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals.
4. Thoroughly inspect the area where the equipment is to be used and remove all objects which can be thrown up by the machine.
5. **WARNING-Diesel is highly flammable:**
 - store fuel in containers specifically designed for this purpose
 - refuel outdoor only and do not smoke while refueling.
 - add fuel before starting the engine. Never remove the cap of the fuel tank or add diesel while the engine is running or when the engine is hot.
 - if diesel is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until diesel vapors have dissipated.
 - Replace all fuel tank and container caps securely
6. Replace faulty silencers
7. Before using, always visually inspect to see that tools are not worn or damaged. Replace worn or damaged elements and bolts in sets to preserve balance.

IX. Operation

1. Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect.
2. Work only in daylight or in good artificial light.
3. Always be sure of your footing on slopes
4. Walk, never run with the machine.
5. Exercise extreme caution when changing direction on slopes
6. Do not work on excessively steep slopes
7. Use extreme caution when reversing or pulling the machine towards you
8. Do not change the engine governor setting or over speed the engine.
9. Start the engine carefully according to manufacturer instructions and with feet well away from the Tool.
10. Do not put hands or feet near or under rotating parts.
11. Never pick up or carry a machine while the engine is running
12. Stop the engine
----whenever you leave the machine
----before refueling
13. Reduce the throttle setting during engine shut down and, if the engine is provided with a shut-off Valve, turn the fuel off at the conclusion of working

X. Matters Need Attention during The Use of power weeder

1. Pay attention to working situations and sound of each part during die work. Check whether the connection between different parts is ok or not, loose situations are not allowed. If abnormalities are found, stop the machine and solve the problems.
2. A-cold machine is forbidden to do heavy load work immediately after the machine is just started, especially for the new machines or the ones after overhaul.
3. Pay attention to checking the oil levels of the diesel engine and gear-box. Refill the engine oil when it is not enough
4. It is not allowed to cool the diesel engine by watering.
5. be cautious about the machine's tilting when farming.
6. The machine fixed with cultivating blades is forbidden to run on sandy or stony place.
7. After using the machine for farming, pay attention to cleaning dirt, weeds and smear on the surface of the machine and keep the machine clean.

8. Clean the sponge or the wire mesh in the air cleaner frequently, and change the engine oil. (Keep an eye on the marking on the empty air cleaner)

XI. Safety Considerations

1. Muffler is a high temperature spare part, do not touch the power weeder in work or out of work freshly.




2. When the power weeder is working, keep an eye on the rotary parts, do not be too close to the machine to avoid being hurt by the rotary blades.



3. Keep the Machine away from fire and smoke.



4. Keep this machine stabilization before use and read the instruction carefully

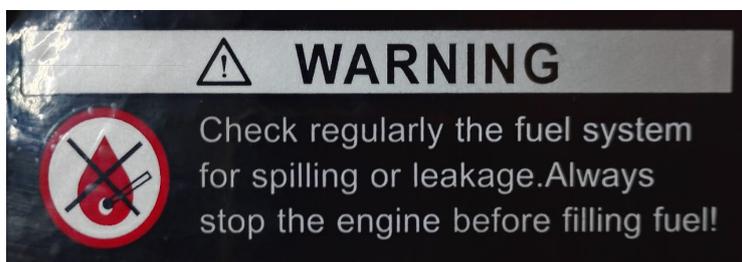

XII.

Please pay attention to warning signs

Chapter Four Maintenance & Service Method of power weeder

During the working period of the power weeder, due to the change of running, abrasion and loading, Phenomena of bolts loosening and parts wearing are inevitable, these phenomena lead to the malfunction of the system, abnormalities of clearances, declination of engine power, more oil consumption, malfunction of each part, more failures of the machine, and the problems affect the normal use of the power weeder. To reduce chances of troubles, it is better to do a strict and regular maintenance job which emphasizes precaution to keep a good performance and extend its working life.

I. Breaking-in

1. Refer the instruction manual for the breaking-in of the diesel engine
2. As for a new or overhauled power weeder, it should be working for 1 hour under no load or 5 hours under light load, then drain all the lubricant from the gear-box and crankcase of the diesel engine, refill appropriate fix of clean diesel, and clean them at a slow speed for 3-5 minutes, then drain the diesel off. Refill engine oil into them according to 4/Clause Three / Chapter II] to enter four hours breaking-in, then the machine can work.

II. Maintenance and storage.

1. Keep all nuts, bolts and screw tight to ensure the equipment is in safe working condition.
2. Never store the equipment with diesel in the tank inside a building where fumes can reach an open flame or spark.
3. Allow the engine to cool before storing in any enclosed place.
4. To reduce the fire hazard, keep the engine, muffler, battery compartment and diesel storage area free of vegetative material and excessive grease.
5. Replace worn or damaged parts for safety.
6. If the fuel tank has to be drained, this shall be done outdoors
7. After adjustment or maintenance, the safety protection guard must be attached to the machine.

III. Technical Service of Power weeder

Clause One Maintenance by each work shift (conducted before and after each shift)

1. Listen and observe if there are any abnormalities of each part (such as abnormal sound, overheating and bolt loosening)
2. Check if there is oil leakage in diesel engine, gear-box and Traveling box.

3. Check if the oil levels of the diesel engine and gear-box are between the two extremes of the oil dipstick.
4. Timely clean the mud, weeds and smear on the machine and its parts.
5. Keep a good farming record

Clause Two the first-rate service (every 150 working hours)

1. Do all the things listed for each work shift maintenance.
2. Clean the gear-box and Traveling box, and change the engine oil.
3. Check and adjust the clutch, shift system and reversing gear system.

Clause Three the second-rate maintenance (every 800 working hours)

1. Do all the things listed every 150 hours for service.
2. Check all the gears and bearing, replace with new ones if serious abrasion is found. |
3. Other parts of the power weeder, like cultivating blade or connection bolts .if damaged, replace with new ones. .

Clause Four Technical overhaul (every 1500-2000 working hours)

1. Take the machine apart in the local special service center, clean and check the machine, then replace or repair the seriously-atrrite part.
2. Specialized service men are invited to check the friction piece and clutch.

Clause Five About the maintenance of the diesel engine, refer to the instruction manual of the diesel engine.

IV. Technical Service List of Power weeder

(The mark O means the required service)

Interval Item to service	Every day	8-Hrs under half load	The 1 st month or after 20-Hrs	The 3 rd month or after 150-Hrs	Every year or after 1000-Hrs	Every 2 years or after 2000-Hrs
Check and screw bolts and nuts	0					
Check and refill engine oil	0					
Clean and change the diesel		0(the 1 st time)	0(the 2 nd time)	0(the 3 rd time)		
Check oil leakage	0					
Clean dirt, weeds and smear to keep clean	0					
Troubleshooting	0					
Adjust the control part	0					
Friction piece of the clutch						0
Gears and bearings					0	

V. Long-Term Storage of Power weeder

When the power weeder needs a long-term storage, the following measures should be adopted to avoid rust.

1. The instruction manual of diesel engine requires to seal the diesel engine up for keeping purpose.
2. Clean dust and dirt away from the surface of the machine.
3. Drain the lubricant from the gear-box and add new lubricant into it.
4. Paint anti-rust oil on the non-painted area of the non-aluminum surface
 - a) The machine should be kept in a ventilated, dry and soft place.

Keep well the self-contained tools, conformity certificate of product and instruction manual

Chapter Five Debugging method of Power weeder

I. Debugging Method of Mesh of Bevel Gear

When the abnormal transmission of mesh of bevel gear of sound is confirmed, stop the machine and check as stipulated below:

1. Clearance adjustment of mesh of angel gear in gear-box
(See Figure 10)

a) When lateral clearance of mesh of the gear $\Delta < 0.05\text{mm}$, we should put some vulcanized paper to enlarge the clearance between the gear-box and the traveling box.



b) When lateral clearance of mesh of the gear $\Delta > 0.3\text{mm}$, we should reduce the clearance to 0.05-0.10 mm between the bearings and gear II shaft

2. Clearance adjustment of mesh of the gear in the Running case.(See Figure 11)

a) When lateral clearance of mesh of the gear $\Delta < 0.05\text{mm}$, we should increase adjustment pad | by 0.2-0.3mm to enlarge the clearance, and change vulcanized paper board II and adjustment pad.

3. To ensure the axial clearance of the gear II is 0.05-0.15mm.

a) When lateral clearance of mesh of the gear $\Delta > 0.3\text{mm}$, we should reduce adjustment pad I , meanwhile the axial clearance of gear II is 0.05-0.15mm, or increase the adjustment pad II, meanwhile ensure the axial clearance of gear I is 0.05-0.15mm

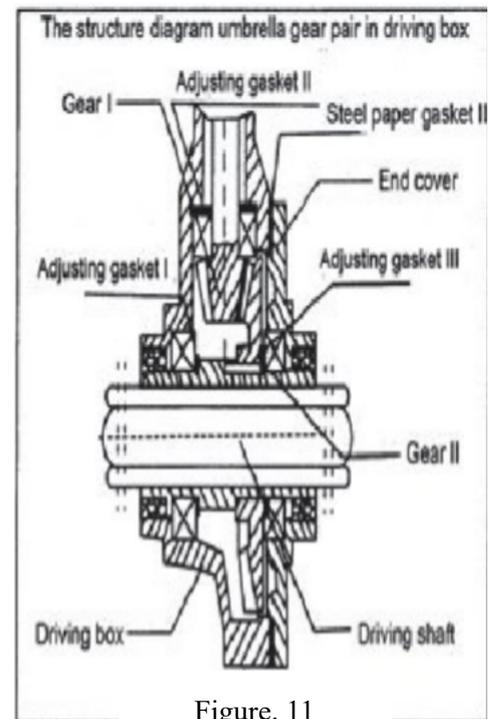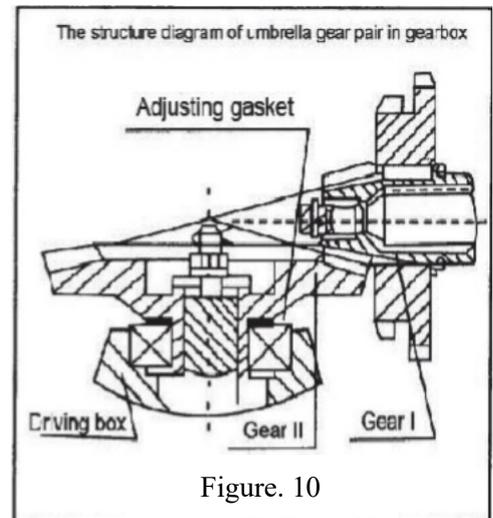

II. Debugging Method of Reversing Gears and Cables

When the power weeder's running backwards is not normal, it is necessary to adjust the reversing gears and Cables, see Chapter Three for the methods.

Note: 1. Grasp and loosen the reversing handle for 2-3 minutes to confirm the putting into gear. If it is abnormal, adjust it until it is qualified.

2. When the power weeder is running, loosen the reversing handle, the reversing gears should return to its original position and no abnormal sound by gears colliding in the gear-box, otherwise, it may cause damage to the gear.

III. Debugging Method of Clutch Cables

After some time use, the clutch does not perform well any more due to the weariness of friction Piece and fork of clutch. As for how to adjust cable of the clutch, refer to Chapter Three for know-how.

Note:

1. Grasp and loosen the clutch handle for 2-3 times to confirm the clutch status. If abnormal, readjust it.
2. If repeated adjustment cannot solve the problem, excess abrasion of fork or friction piece of the clutch can be confirmed. The machine should be sent to special service center for replacing with a new fork of friction piece of the clutch.
3. Dismount the clutch by unspecialized person, which may cause damage to the clutch and the machine is forbidden.

IV. Debugging Method of Accelerator Cables

When spinning the throttle switch, acceleration or deceleration performance if the diesel engine is not good, adjust the throttle switch. Refer to Chapter Three for measures.

Note: 1. Repeatedly spin the throttle switch for 2-3 times and confirm whether the acceleration or - deceleration performance of the diesel engine is ok.

2. Joint of the cable must be firmly connected to the throttle cable.

V. Use & Debugging Method of Handle bar Frame

According to your height, farming and other special requirements ,the handle bar connection can be adjusted up and down, left and right appropriately, measure are interpreted as following: (see figure 12)

1. The up and down debugging for the handle bar connection

- a. Unscrew the Locked handle of the handle bar connection, and make the terminal tooth between the handle bar connection and the handle bar base separated.

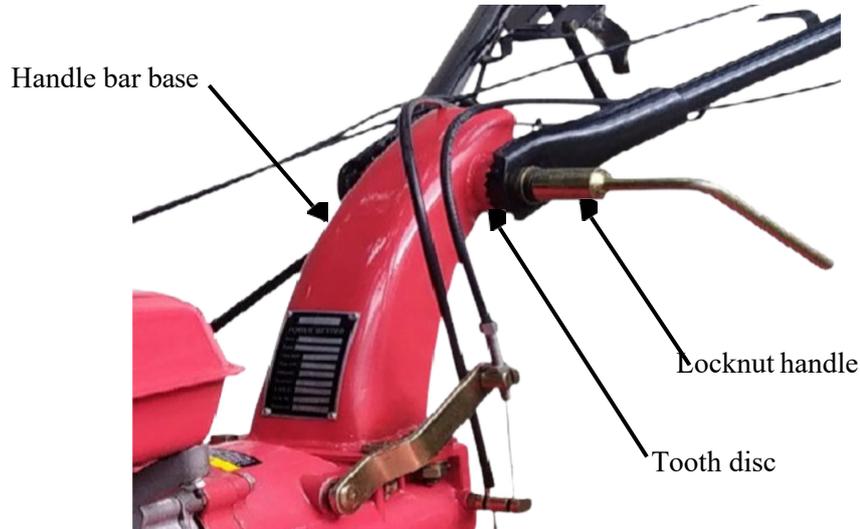


Figure. 11

- b. Select the best position for the handle bar connection according to your height and likes.
 - c. Then spin the handle to make the terminal teeth between the handle bar connection and handle bar base engage well with each other.
2. The left and right debugging for the handle bar connection
 - a. Unscrew the locknut handle of the handle bar base and the upper and lower terminal teeth.
 - b. Spin the handle bar left or right to desired position.
 - c. Then screw the locknut handle to make the higher and lower terminal teeth of the handle bar base engage well with each other.

Chapter Six Troubleshooting of Power weeder

I. Troubleshooting of Petrol Engine.

Refer to the instruction manual of diesel engine.

II. Troubleshooting of Clutch

(**Note:** do not dismount the clutch assembly by yourself. Contact our company or our dealers to shoot the troubles marked with)

Symptom	Cause	Terms of settlement
	Failure of the clutch handle	Repair or replace
	Damage of the clutch Cables	Replace
	Fork not in the right position	Re-adjust the cable or replace the fork
	Welding points between fork shaft and arm base break off	Repair or replace
	Fork pin is bent or broken	Replace the fork pin
	*Malfunction of the friction plate	Replace
	*Malfunction of spring	Replace
	The friction piece fails to touch the bearing face of the clutch cover	Add some adjustment pads to the back
	Bearing is burnt on the clutch	Replace pay attention to refilling engine oil into the gear box
skid around (after loosening the clutch, the diesel engine runs normally, but the main shaft of the transmission shaft stops running or runs slowly)	*The spring does not function due to tiredness	Replace
	Fork shafts failure to turn around freely makes the fork fail to reset completely	clean the combined face between positioning shaft and pushing plate to make the fork move freely
	Cable adjust is not right	RE-adjust the clutch cable

III. Troubleshooting of Gear-box

Symptoms	Cause	Terms of settlement
Failure of fast, slow and neutral shift	Bolts and nuts for the main shaft are loose	Dismount the bolts, keys cover at the back of the main shaft, screw the round nuts tight, then fix back the bolts and keys cover and screw them tight
Failure to shaft to the right position	Excess abrasion of puller	Replace the puller
	Driving angle gear is loosen	Tighten the round nut
	Excess abrasion of the upper hole in the connection piece of support arm	Replace the support arm assembly
	Positioning spring inside the main shaft does not function	Replace
	Main shaft is moving ,the bolts for tightening the cover for the rear of the gear-box body are loose	Screw the bolts tight
	Deformation of shift bar brings about interference when you shift	Adjust the shift bar or Replace it
Failure to shift the reversing shift to the right position	Abrasion of reversing fork	Re-adjust the cable of reversing shift Replace the reversing fork
	Malfunction of reversing cable	Re-adjust the cable Replace the cable
	The reversing shaft is loose	Screw the bolts tight at the back of the reversing shaft
	The reversing fork is blocked to a standstill	Clean the combined face between reversing fork and reversing pushing plate to make the fork move free
The reversing gears do not reset	The loosening of reversing shaft makes the gear be blocked to a standstill	Screw the bolts tight at the back of the reversing shaft.
	Malfunction of spring of the reversing shaft	Replace the spring
	The reversing shaft is bent and deformed	Replace the reversing shaft

The reversing shaft is loose	Rear bolts of reversing shaft are loose	Screw the reversing shaft
	The matching between reversing shaft and gear-box body is too loose	Replace
Too much noise from the gears	Deformation and bend of the angle gear and reversing shaft	Replace
	Too much lateral clearance due to excess abrasion of gears	Replace the gears
	The matching between bevel gear and reversing shaft and gear-box body is too loose	Replace
Oil leakage of the main shafts rear cover	Malfunction of O-shaped ring for the main shaft	Replace with O-shaped ring n17x1.8
	Malfunction of lip-shaped oil seal in the main shaft	Replace with lip-shaped oil seal B25407
	Malfunction of O-shaped ring for the cover	Replace with O-shaped ring n46x1.8
Oil leakage of the reversing shaft	Loosening of bolts at the back of reversing shaft	Screw the bolts tight
	Malfunction of O-shaped ring of the reversing shaft	Replace with O-shaped ring n18x1.8
Oil leakage of the fork shaft of reversing shaft	Malfunction of O-shaped ring	Replace with O-shaped ring n1.2x1.8
Oil leakage of the fork shaft of the clutch	Malfunction of O-shaped ring	Replace with O-shaped ring n1.2x1.8
Oil leakage of the shift shaft	Malfunction of O-shaped ring	Replace with O-shaped ring n1.2x1.8
Oil leakage of the flange connection	The bolts are loose there	Screw the bolts tight
	The vulcanized paper board is damaged there	Replace
Leakage of the gear box body	The gear box body has tiny hidden holes	Re-welding or brush base paint to stop the leakage

IV. Troubleshooting of Clutch

Symptoms	Cause	Terms of settlement
Too much noise from the gear	Excess abrasion or error repairing of the gear	Re-fix and re-adjust or replace the gear
Gears are blocked to standstill when running	Error fixing	Re-fix
Overheating	No enough lubricant in the box	Re-fill oil according to the request
	The lateral clearance of gear is too small	Re-fix
	The axial clearance is too small	Re-adjust
Oil leakage of the gear-box connection	The connection bolt there is loose	Screw the bolt tight
	The seal gasket there is damaged	Replace with lip shaped oil seal B45628
The oil leakage of the output shaft casing	The lip shaped oil seal there is damaged	Replace with lip shaped oil seal B45628
Serious oil leakage of the hexagonal hole in the output shaft casing	The shaft casing is broken	Replace
Oil leakage of oil hole	The O-shaped ring is damaged	Replace with O-shaped ring n10x1.8
	The bolts are loose	Screw the bolt tight
Leakage of the travelling box body	The travelling box body has tiny hidden hole	Re-welding or brush the base paint to stop the leakage

V. Other Troubleshooting

Symptom	Cause	Terms of settlement
The cultivating blade is broken	Collide with the hard things like stones when working	Replace it, Avoid colliding with hard things like stones in the earth when working
The manipulation cable is broken	Long time abrasion in work	Replace

VI. Torque details & Bearing list

1. Torque details

SL / NO	PART NAME	TORQUE IN N-m
1	CONNECTING ROD	12 N-m
2	CRANCKCASE COVER	24 N-m
3	CYLINDER HEAD	24 N-m
4	ROCKR ARM PIVOT LOCK NUT	10 N-m
5	ROCKR ARM PIVOT BOLT	24 N-m
6	OIL DRAIN ENGINE	18 N-m
7	FLY WHEEL NUT	70 N-m

2. Bearing list

BEARING NUMBER	BEARING TYPE	NAME
6205	BALL BEARING	CRANCKCASE
6205	BALL BEARING	CRANCKCASE COVER
6203	BALL BEARING	SPLINE SHAFT END
6203	BALL BEARING	GEAR SHIFTER
6305	BALL BEARING	HEX AXIAL(FINAL DRIVE)
6202	BALL BEARING	SPLINE SHAFT FRONT
6007	BALL BEARING	CLUTCH COVER
30203	TAPER BEARING	GEAR SHIFTER
30204	TAPER BEARING	TRANSMISSION SHAFT
30205	TAPER BEARING	TRANSMISSION SHAFT
30305	TAPER BEARING	HEX AXIAL(FINAL DRIVE)
6305	BALL BEARING	HEX AXIAL(FINAL DRIVE)
6202	BALL BEARING	SPLINE SHAFT FRONT
6007	BALL BEARING	CLUTCH COVER
30203	TAPER BEARING	GEAR SHIFTER
30204	TAPER BEARING	TRANSMISSION SHAFT
30205	TAPER BEARING	TRANSMISSION SHAFT
30305	TAPER BEARING	HEX AXIAL(FINAL DRIVE)

Closing

The micro agricultural machine is a labor tool needed in the vast countryside, today, the science and technology is progressing fast and the market economy is developing daily, our company has researched and manufactured this multi-function micro agricultural machine which can replace cows for farming. The practice has proved that, the machine is really an efficient tool for freeing the labor, also a reform of the thousands yearlong traditional cow ploughing. The phenomenon “start working when the sun is rising, stop working when the sun is going down” will disappear because of the appearing of the machine.

Thank you for buying our power weeder, as long as you use and manipulate the machine carefully according to our instruction manual, you will enjoy obvious economic gains.

Moreover, our company has relative water pumping machines, rice machines, sprinkling machines and generators, etc. If you need any of them, please kindly contact our dealers or our company.

In the future, our company will strive continuously and be go-getting to develop more and better agricultural machining products to change the undeveloped face of agriculture in our country, to make our contributions for shortening the distances between our country and agriculturally developed country, and for our country’s early realization of agricultural mechanization.